




RC300

User Manual and Warranty Information

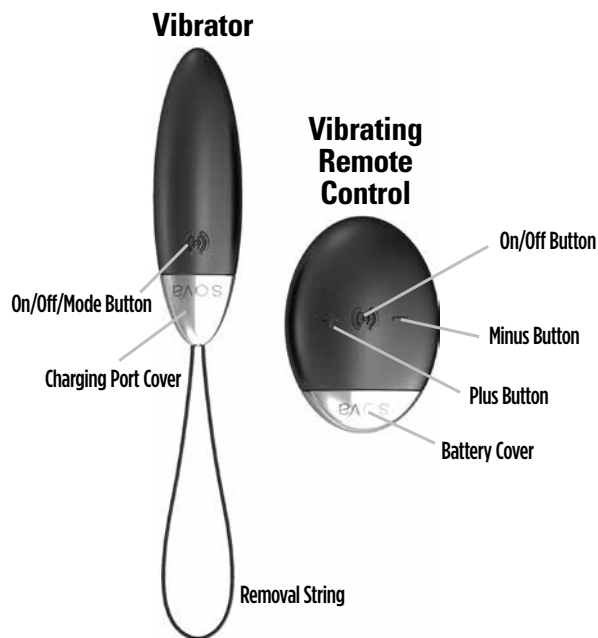

Register your product online at www.enjoysova.com

By registering your product, you will receive Proof of Ownership, Product protection, and Product registration.


How to Use

Congratulations on your purchase of your Sova™ device! Before using, please read the information contained in this user manual to learn more about your product and proper use.

Before use: wash and rinse the device with a mild anti-bacterial soap and warm water or a rubber and silicone friendly vibrator cleaner.

Charging your Sova™ Vibrator

1. Make sure the vibrator is turned off before charging. Your Sova vibrator charges with the included DC adapter. Hold the vibrator with the chrome charging port cover facing down and rotate it to the left until you feel a click. **(a)** Remove the cover to expose the vibrator's adapter plug for charging.
2. Connect the cord to the vibrator's adapter plug and then connect the cord to the electrical outlet. **(b)** The indicator light in the adapter plug will flash while charging. When the vibrator is fully charged, the indicator light will glow steadily.
3. Disconnect the cord from the vibrator. Replace the charging port cover on the vibrator and rotate it to the right until it clicks into locked position.

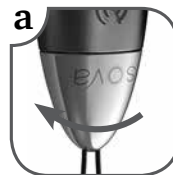

To aid in removing and replacing the covers to the devices, note the ◀ | ▶ indicators on the back of the covers and the raised | indicators on the devices. These symbols must align when securing the covers.

Inserting Batteries into the Vibrating Remote Control

Remove the battery cover of the vibrating remote control by rotating it to the left until you feel a click. Remove the inner battery cover **(c)** by releasing the snap. Insert two AAA batteries in the orientation as shown. Place the inner battery cover onto the device with the wire spring mating with the battery, with the negative (-) side facing upwards. **(c)** Place the battery cover back on the vibrating remote control by rotating to the right until you feel a click.



How to Operate

The vibrator and vibrating remote control can be used as independently functioning devices when only one is turned on. When both the vibrator and vibrating remote control are on, the vibrating remote control is in control of the vibration settings for itself and the vibrator, although you can still change the modes of the vibrator independently. Use the following directions to activate the devices and the vibration modes.

Turn On: Press and hold the On/Off button for 1 second to turn on the device.

Turn Off: Press and hold the On/Off button for 1 second to turn off the device.

Selecting Vibration Mode: There are 6 vibration modes. To cycle through the modes on the vibrator briefly press the On/Off button. To cycle through the modes on the vibrating remote control press the + or - buttons.

Each time a device is turned on, it will begin at Mode 1.

Mode 1: Light continuous vibration

Mode 4: Pulsing wave vibration

Mode 2: Moderate continuous vibration

Mode 5: Flutter vibration

Mode 3: Intense continuous vibration

Mode 6: Quick, rapid pulsation

Lubricants

Water based lubricants are recommended with these devices. Silicone and oil based lubricants can degrade the silicone material and should not be used.

Cleaning and Storage

Cleaning

Clean your Sova™ device before first use and between uses thereafter with warm water and mild antibacterial soap or a rubber and silicone friendly vibrator cleaner. Dry completely with a soft, lint-free cloth. While cleaning, avoid submerging the device into water as it is **not a waterproof device**. Do not allow water to enter the battery compartment. Do not clean with boiling water or wash it in the dishwasher as extreme temperatures may damage the device.

Storage

When your Sova device is clean and dry, place it in the included satin pouch and store in a cool, dry environment.

Safety

- Use only as directed. You are responsible for using Sova™ products in a safe manner. While this user manual does include safety notes, it is essential for you to employ common sense in intimate encounters.
- Do not submerge device underwater. This is not a waterproof device.
- Only use the Sova device with the charging port cover and battery cover and all components completely secure to prevent moisture from getting to the battery and the motor compartment.
- Only insert silicone rubber end during use. Do not insert past the rubber coated portion of the device.
- Do not insert chrome switch cap end of device during any use.
- Do not share device with others.
- If you are allergic to silicone, do not use.
- If signs of an allergic reaction appear, immediately discontinue use of the device and contact your doctor.
- Do not use device on swollen, inflamed areas, broken skin, or areas with poor circulation.
- Do not use on any single area for an extended period of time.
- Do not use the vibrating remote control internally.
- The Sova device does not have a flared end and is not safe for use as an anal device. Do not use it in your or another individual's anus.
- Avoid dropping your Sova device. It may scratch the coating or otherwise damage the device. Do not use the device if the surface is damaged in any way.
- Do not use a Sova device that you know or suspect may be defective, for example having the appearance of a defective coating or containing corroded batteries.
- Keep the device and batteries out of the reach of children and pets. Should the battery, motor, or any parts of the device be inadvertently swallowed, please contact your doctor immediately.
- Do not leave the Sova device unattended on any surface while it is operating.
- Only use DC charger adapters provided by Sova.

Troubleshooting

Why won't the Vibrating Remote Control turn on?

- Check that the batteries are oriented correctly. Negative ends (-) of the batteries mate with the springs. (c)
- Make sure to press and hold the On/Off button for 1 second to turn on.

Why won't my Sova™ device turn off?

- Press and hold the On/Off/Mode button on the vibrator or the On/Off button on the vibrating remote control for 1 second to stop the device.

Why doesn't the vibrating remote control communicate with the vibrator?

- The vibrating remote control will only control the vibrator up to a distance of 10 feet.
- Obstructions such as bedding or walls can impede remote control functionality.
- The vibrator is not turned on.
- The remote is not turned on.

Why won't my Sova™ device change modes?

- To cycle through the modes, press the On/Off button on the vibrator or the + or - buttons on the vibrating remote control when turned on.

If you experience other issues or concerns with your Sova device, please contact 888-844-6763.

Specifications

Materials: Silicone Rubber: FDA 21 CFR 177.2600 Certified.

Covers: Aluminum with UV coating

Vibrator Battery: 3.7 Volt Lithium cell

Remote Control Battery: Holds two 1.5 Volt, Size AAA, Alkaline batteries

This device is phthalate free.

Disposal

All batteries must be recycled or disposed of in accordance with applicable state and local regulations. Do not put batteries in fire or mutilate, as batteries may burst or release toxic materials. Do not short-circuit batteries as this may cause burns.

Product Returns

Unopened Returns

If you are dissatisfied with your device, it may be returned unopened and unused within 30 days of receipt for a credit, refund or exchange. NOTE: The plastic sleeve and any other seals that enclose the device box must be unbroken.

Pre-authorization is required for all returns and exchanges. No item can be returned without a Return Merchandise Authorization (RMA) number. To get an RMA number, please contact 888-844-6763. You will need to provide your proof of ownership.

Customer Service

Questions or comments: Call 888-844-6763

Or visit www.enjoysova.com

Warranty Information

Limited One Year Warranty

Products Plus LLC warrants this product against any defects that are due to faulty material or workmanship for a one-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge, if deemed a warranty defect. For all warranty questions or comments: Call 888-844-6763 or visit www.enjoysova.com

THE FOREGOING IS THE SOLE WARRANTY FOR THE PRODUCT. PRODUCTS PLUS LLC HEREBY DISCLAIMS ANY IMPLIED WARRANTY THAT THE PRODUCT WILL BE MERCHANTABLE OR FIT FOR ANY PARTICULAR PURPOSE. PRODUCTS PLUS LLC'S LIABILITY AND CONSUMER'S EXCLUSIVE REMEDY UNDER THE FOREGOING PARAGRAPH WILL BE LIMITED TO A REPLACEMENT, REFUND OF OR CREDIT FOR THE PURCHASE PRICE PAID BY THE CONSUMER FOR THE NONCONFORMING, DEFECTIVE, OR DAMAGED PRODUCT, IN PRODUCTS PLUS LLC'S SOLE DISCRETION. THE WARRANTY ABOVE IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED.

Disclaimer

Consumers may use this device at their own risk. PRODUCTS PLUS LLC does not assume any responsibility or liability for any use of this device.

FCC ID: 2AFGP-RC300T and FCC ID: 2AFGP-RC300R

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Warning: Changes or modifications to this unit not expressly approved by Products Plus LLC could void the user's authority to operate the equipment.

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOR ADULT USE ONLY.

PRODUCTS PLUS LLC
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

TM Trademark of Products Plus LLC
© 2015 Products Plus LLC
www.enjoysova.com