



RC500

User Manual and Warranty Information



Register your product online at www.enjoysova.com

By registering your product, you will receive Proof of Ownership, Product protection, and Product registration.


How to Use

Congratulations on your purchase of your Sova™ device! Before using, please read the information contained in this user manual to learn more about your product and proper use.

Before use: wash and rinse the device with a mild anti-bacterial soap and warm water or a rubber and silicone friendly vibrator cleaner.

Charging Your Sova™ Device

1. Make sure your device is turned off before charging. To aid in removing and attaching the attachments to the base, note the ◀ | ▶ indicator on the back of the base and the | indicators on the attachments. Align these symbols when changing attachments.
2. Your Sova device charges with a USB attachment. To begin charging, rotate the device base counter-clockwise until you feel a click. Then pull base out of attachment. This will expose the device's USB plug for charging.
3. Insert the base's USB plug into a USB outlet or a wall outlet adapter, either directly or in conjunction with the included USB cord (see figure a). The indicator light will flash red while charging. When fully charged, the indicator light on the bottom of the base will glow purple steadily. A complete charge will take 2 hours, although the device will work with a partial charge.
4. Disconnect the base from the USB outlet or adapter when fully charged. Select an attachment to place on the base. Insert the USB fitting of the base into the attachment and rotate clockwise until it clicks into locked position.

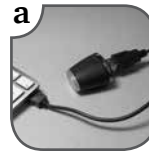

How to Operate

Select your attachment. The three attachments are interchangeable on the base.

Turn On: Firmly press and hold the On/Off button for 1 second to turn on the device.

Turn Off: Firmly press and hold the On/Off button for 1 second to turn off the device.

Selecting Vibration Mode: There are 7 vibration modes. To cycle through the modes, repeatedly (briefly) press the On/Off button.

Mode 1: Light continuous vibration

Mode 2: Moderate continuous vibration

Mode 3: Intense continuous vibration

Mode 4: Pulsing wave vibration

Mode 5: Flutter vibration

Mode 6: Quick, rapid pulsation

Mode 7: Escalating vibration

Each time the device is turned on, it will begin at Mode 1.

Changing Attachments

Make sure your device is turned off before changing attachments. Remove the base by rotating counter-clockwise until you feel a click. Then pull base out of attachment. Select another attachment. Place the base on this attachment by inserting the USB fitting and rotating clockwise until it clicks into locked position.

Lubricants

Water based lubricants are recommended with this device. Some silicone and oil based lubricants can degrade the silicone material and should not be used.

Safety

- Use only as directed. You are responsible for using Sova™ products in a safe manner. While this user manual does include safety notes it is essential for you to employ common sense in intimate encounters.
- Do not submerge device underwater. This is not a waterproof device.
- Only use the Sova device with the base and attachment completely secure to prevent moisture from getting to the battery and the motor compartment.
- Only insert silicone rubber attachment end during use. Do not insert past the rubber coated portion of the device.
- Do not insert the device's base end during any use.
- Do not share device with others.
- If you are allergic to silicone, do not use.
- If signs of an allergic reaction appear, immediately discontinue use of the device and contact your doctor.
- Do not use device on swollen, inflamed areas, broken skin, or areas with poor circulation.
- Do not use on any single area for an extended period of time.
- The Sova device does not have a flared end and is not safe for use as an anal device. Do not use it in your or another individual's anus.
- Avoid dropping your Sova device. It may scratch the coating or otherwise damage the device. Do not use the device if the surface is damaged in any way.
- Do not use a Sova device that you know or suspect may be defective, for example having the appearance of a defective coating or containing corroded batteries.
- Keep the device and batteries out of the reach of children and pets. Should the battery, motor, or any parts of the device be inadvertently swallowed, please contact your doctor immediately.
- Do not leave the Sova device unattended on any surface while it is operating.
- Do not use the device without an attachment provided by Sova.

Cleaning and Storage

Cleaning

Clean your Sova™ device before first use and between uses thereafter with warm water and mild antibacterial soap or a rubber and silicone friendly vibrator cleaner. Dry completely with a soft, lint-free cloth. While cleaning, avoid submerging the device into water as it is **not a waterproof device**. Do not allow water to enter the battery compartment. Do not clean with boiling water or wash it in the dishwasher as extreme temperatures may damage the device.

Storage

When your Sova device is clean and dry, place it in the included satin pouch and store in a cool, dry environment.

Troubleshooting

Why won't my Sova™ device turn on?

- Check that the battery is fully charged. Vibrator is fully charged when indicator light on the device is steady and purple.
- Make sure to press and hold the On/Off button for 1 second to turn on.

Why won't my Sova™ device turn off?

- Press and hold the On/Off button for 1 second to stop the device.

Why won't my Sova™ device change modes?

- Press the On/Off switch quickly to change modes.

If you experience other issues or concerns with your Sova device, please contact 888-844-6763.

Specifications

Materials: Silicone Rubber: FDA 21 CFR 177.2600 Certified.

Chrome Ring: Aluminum with UV coating

Battery: Rechargeable 3.7 Volt Lithium battery

This device is phthalate free.

Disposal

All batteries must be recycled or disposed of in accordance with applicable state and local regulations. Do not put batteries in fire or mutilate, as batteries may burst or release toxic materials. Do not short-circuit batteries as this may cause burns.

Product Returns

Unopened Returns

If you are dissatisfied with your device, it may be returned unopened and unused within 30 days of receipt for a credit, refund or exchange. NOTE: The plastic sleeve and any other seals that enclose the device box must be unbroken.

Pre-authorization is required for all returns and exchanges. No item can be returned without a Return Merchandise Authorization (RMA) number. To get an RMA number, please contact Customer Service at: 888-844-6763. You will need to provide your proof of ownership.

Customer Service

Questions or comments: Call 888-844-6763

Or visit www.enjoysova.com

Warranty Information

Limited One Year Warranty

Products Plus LLC warrants this product against any defects that are due to faulty material or workmanship for a one-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge, if deemed a warranty defect. For all warranty questions or comments: Call 888-844-6763 or visit www.enjoysova.com

THE FOREGOING IS THE SOLE WARRANTY FOR THE PRODUCT. PRODUCTS PLUS LLC HEREBY DISCLAIMS ANY IMPLIED WARRANTY THAT THE PRODUCT WILL BE MERCHANTABILITY OR FIT FOR ANY PARTICULAR PURPOSE. PRODUCTS PLUS LLC'S LIABILITY AND CONSUMER'S EXCLUSIVE REMEDY UNDER THE FOREGOING PARAGRAPH WILL BE LIMITED TO A REPLACEMENT, REFUND OF OR CREDIT FOR THE PURCHASE PRICE PAID BY THE CONSUMER FOR THE NONCONFORMING, DEFECTIVE, OR DAMAGED PRODUCT, IN PRODUCTS PLUS LLC'S SOLE DISCRETION. THE WARRANTY ABOVE IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED.

Disclaimer

Consumers may use this device at their own risk. PRODUCTS PLUS LLC does not assume any responsibility or liability for any use of this device.

FOR ADULT USE ONLY.

PRODUCTS PLUS LLC
507 Stokely Drive
P.O. Box 1
Deforest, WI 53532

TM Trademark of Products Plus LLC
© 2015 Products Plus LLC
www.enjoysova.com

7/15 12974-00

T22-0003631